

INFINITY 5-IN-1 59" CHARGING CABLE WITH WATCH CHARGER

INSTRUCTION MANUAL


EAC-IN25

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Attachments on the back of your watch can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your watch before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to "test mode" in the presence of a strong magnetic force, if pace-maker or other electronical body implant is in use. Keep a minimum of 3 feet distance.

PRODUCT DIAGRAMS

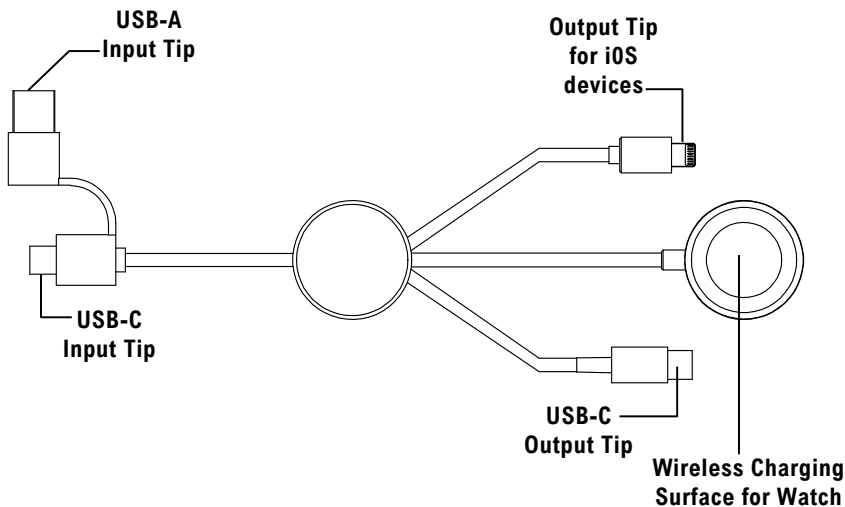

WIRELESS CHARGING INSTRUCTIONS

- Plug the input tip into a USB-A or USB-C power source, such as the USB-A or USB-C port on a computer or into a certified USB-A/USB-C adapter (not included), and plug into a wall socket.
- Place a wireless charging enabled smart watch on the wireless charging surface, the watch will begin to charge automatically.
- There will be charging indication on the display of the charged watch.
- If your watch does not begin to charge, try repositioning your watch on the wireless charging surface. You may need to remove the case of your watch to charge properly.
- Remove your watch from the wireless charging surface when it is fully charged.

CHARGING CABLE INSTRUCTIONS

- Plug the input tip into a USB-A or USB-C power source, such as the USB-A or USB-C port on a computer or into a certified USB-A/USB-C adapter (not included), and plug into a wall socket.

- Connect the appropriate output tip from the cable to your device.
- Your device will begin to charge.
- Remove the cable from your device when it is fully charged.

TECH SPECIFICATIONS

- Power Input: DC 5V/2A
- Wireless Charging Output: 2W
- Cable Peak Output Current: 2A
- Wireless Charging Distance: no more than 3mm
- Working Temperature: 14°F ~ 122°F (-10°C ~ 50°C)

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A9Q9-EAC-IN25

Made in China