

**SUNSET 20W STEREO SPEAKER
WITH CLOCK / WIRELESS CHARGER / WHITE NOISE
INSTRUCTION MANUAL
EAC-SU25**

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


IN THE BOX

- EAC-SU25 Sunset 20W Stereo Speaker with Clock / Wireless Charger / White Noise (x1)
- USB-C Charging Cable (x1)


SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.

PRODUCT DIAGRAMS

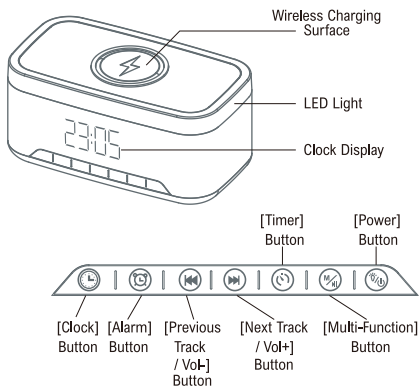

BACK OF SPEAKER

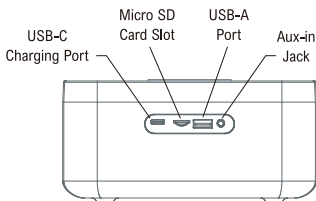

INSTRUCTIONS

Be sure to fully charge the speaker before using for the first time.

CHARGE THE SPEAKER

- Plug one end of the included charging cable into the USB-C charging port on the back of the speaker.
- Plug the other end of the cable into a USB-C power source, such as the USB-C

port on a computer or into a certified USB-C adapter (not included), and plug into a wall socket.

- The LED indicator next to the USB-C charging port will **glow RED** when charging and turn off when **fully** charged.
- On lower power, you will hear a voice prompt saying “Low battery.” indicating that the speaker needs to be recharged.

PAIR & CONNECT WITH A NEW DEVICE

- Press and hold the **[Power] button** for 3 seconds to power ON.
- The speaker will enter Bluetooth mode. You will hear a voice prompt saying “Power on. Bluetooth mode. Pairing.” The BT icon will flash in the display of speaker indicating the speaker is in pairing mode.
- Open the Bluetooth menu on your smart device and search for new devices.
- When you see “**Sunset Speaker**” listed, tap it to connect. You will hear a voice prompt saying “Bluetooth connected.” and the BT icon will stop flashing when paired successfully.
- Previously paired speaker will pair automatically after they are powered on.
- Press and hold the **[Power] button** again for 3 seconds to turn off the speaker. You will hear a voice prompt saying “Power off”

***Note:** The speaker will automatically shut off after 5 minutes when it is disconnected.*

PLAYING MUSIC & CALLING

When playing music:

- Press the **[Multi-Function] button** to play/pause your audio.
- Press the **[>>>] button** to skip to next track;
- Press and hold the **[>>>] button** to increase volume.
- Press the **[<<<] button** to skip to previous track;
- Press and hold the **[<<<] button** to decrease volume.
- The speaker display will show volume level when adjusting volume.

When there is an incoming call:

- Press the **[Multi-Function] button** once to answer an incoming phone call, and again to end a phone call.
- 2x rapid press on the **[Multi-Function] button** to redial the last dialed number.

TWS PAIRING TWO SPEAKERS

- If you have two Sunset Stereo Speaker, you can make a True Wireless (TWS)

pairing between them by following below steps:

- Place the two speakers near each other, and power on both speakers.
- Press and hold the **[Multi-Function] button** on either speaker, the speaker will pair to each other automatically.
- Follow the instructions under “**Pair & Connect with a New Device**” to connect your device to the speaker pair.

Note:

- Press and hold the **[Multi-Function] button** on either speaker to disconnect two speakers.
- If you have previously paired your device to one of the speakers, you may need to turn off Bluetooth of your device while you pair the speakers to each other.

RESET THE SPEAKER

- If you have trouble pairing your speaker, forget the pairing name “**Sunset Speaker**” from the list of the connected device and turn off the Bluetooth.
- Follow the instructions under “**Pair & Connect with a New Device**” to pair with the speaker again.

WHITE NOISE MODE

- In the Bluetooth mode, press and hold the **[Multi-Function] button** for 3 seconds to enter white noise mode. The NS icon will appear in the display indicating the speaker is in white noise mode.
- Press the **[Multi-Function] button** to play/pause the sound.
- Press the **[▶▶] button** and **[◀◀] button** to select sound.
- Press and hold the **[▶▶] button** to increase volume
- Press and hold the **[▶▶] button** to decrease volume.
- Press and hold the **[Power] button** for 3 seconds to turn off the speaker.

FM RADIO MODE

- In the white noise mode, press and hold the **[Multi-Function] button** for 3 seconds to enter FM radio mode. You will hear a voice prompt saying “FM radio mode”. The FM icon will appear in the display indicating the speaker is in FM radio mode.
- Plug one end of the included charging cable into the USB-C charging port on back of the speaker, leaving the other end not connecting to any devices or power. The charging cable will work as FM radio antenna.
- Press the **[Multi-Function] button** to search and to save radio channel

automatically. When the channel searching is complete, press the [**▶▶**] **button** and [**◀◀**] **button to change radio channel.**

- In the FM radio mode, press and hold the [**Multi-Function**] **button** for 3 seconds to enter Bluetooth mode.

USB MODE & MICROSD MODE

- When the speaker is powered on, plug USB flash drive or microSD card into the USB-A port or microSD card slot on the back of speaker to enter USB mode or microSD mode. You will hear a voice prompt saying "USB mode" or "MicroSD mode".
- The speaker will automatically read the audio file in the USB flash drive or microSD card and play.
- Press the [**Multi-Function**] **button** to play/pause your audio.
- Press the [**▶▶**] **button** to skip to next track;
- Press and hold the [**▶▶**] **button** to increase volume.
- Press the [**◀◀**] **button** to skip to previous track;
- Press and hold the [**◀◀**] **button** to decrease volume.
- The speaker display will show volume level when adjusting volume.

SETTING THE TIME

- Make sure the clock time is shown in the display.
- Press and hold the [**Clock**] **button** to toggle between the 12-hour and 24-hour clock.
- Press the [**Clock**] **button** to set the time. The **HOUR digits** will flash. Press the [**▶▶**] and [**◀◀**] **buttons** to adjust. Press the [**Clock**] **button** to save the hour setting and the **MINUTE digits** will flash. Press the [**▶▶**] and [**◀◀**] **buttons** to adjust. Press the [**Clock**] **button** to save the minute setting. The clock will return to clock display

SETTING THE TIME

- Press and hold the [**Alarm**] **button** to turn the alarm ON or OFF. The alarm icon will appear in the display when the alarm is turned on.
- Press the [**Alarm**] **button** to set the alarm time. The **alarm HOUR digits** will flash. Press the [**▶▶**] and [**◀◀**] **buttons** to adjust. Press the [**Clock**] **button** to save the hour setting and the **alarm MINUTE digits** will flash. Press the [**▶▶**] and [**◀◀**] **buttons** to adjust. Press the [**Clock**] **button** to save the minute setting and the alarm code will show up in the display. You will hear the alarm tone at the same time. Press the [**▶▶**] and [**◀◀**] **buttons** to adjust, and press the

[Alarm] button to save. The clock will return to clock display.

USING RGB LED LIGHT

- The LED light will turn on when the speaker is powered on.
- Press the **[Power]** button to adjust light mode or to turn the LED light OFF.

USING SLEEP TIMER

- Press the **[Timer]** button to turn on sleep timer.
- The **timer digits** 15, 30 or 60 will appear in the clock display, indicating the speaker will shut off in 15 minutes, 30 minutes or 60 minutes.
- Press the **[Timer]** button till the **timer digits** disappear in the display to turn off the sleep timer.

WIRELESS CHARGING INSTRUCTIONS

- The wireless charger will enter standby mode and ready to begin charge when the speaker is connected to power. The LED indicator in the back will **illuminate BLUE** in standby mode.
- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically.
- The LED indicator will **illuminate RED** to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.

NOTE:

- If the LED indicator is **flashing BLUE** when the wireless charger is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.
- To achieve fast wireless charging, please use 18W or higher power adapter (not included)

NOTE ON SAFETY FEATURES:

The wireless charging will automatically power **OFF** when the wireless charging surface is overheated, or when a metal object, such as a coin, is placed on the wireless charging surface. The LED indicator will **flash BLUE** to warn of automatic shutoff.

TECH SPECIFICATIONS

Speaker Output	10W *2
Frequency Response	20Hz ~ 20KHz
S/N Ratio	>80dB
Connection Range	33 feet
Continuous Working Time	Up to 8 hours
Battery Capacity	1800mAh/3.7V 6.66Wh
Power Input	DC 5V/1A
Charging Time	3 hours
Wireless Charging Input	DC 5V/3A, 9V/2A
Wireless Charging Output	5W/7.5W/10W/15W
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AMPL-EAC-SU25
Made in China