

REVUE TWS EARBUDS & MAGNETIC CHARGING CASE

INSTRUCTION MANUAL

EHE-RE26

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


IN THE BOX

- EHE-RE26 Revue TWS Earbuds & Magnetic Charging Case (x1)
- Charging Cable (x1)

SAFETY PRECAUTIONS

- This device is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

PRODUCT DIAGRAMS

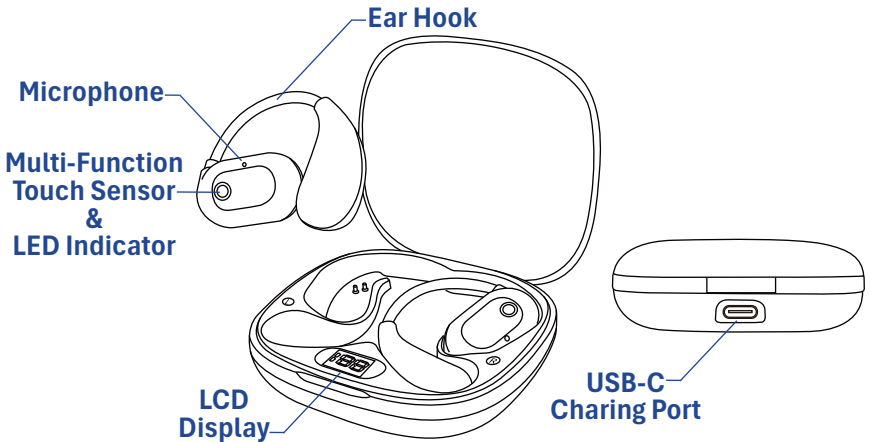

INSTRUCTIONS

Be sure to fully charge the earbuds and charging case before using for the first time.

CHARGE THE EARBUDS

- Make sure the earbuds are properly seated in the charging case.
- Place the left and right earbuds into the corresponding slots, ensuring the magnetic charging contacts align correctly.
- The LED indicator on the earbuds will **illuminate WHITE** to indicate charging properly and turn OFF when fully charged.
- A voice prompt saying “**Battery low**” will be heard when the earbuds need to be recharged.

CHARGE THE CHARGING CASE

- Insert the smaller end of the included charging cable into the USB-C charging port on the charging case.
- Connect the other end of the included charging cable to a USB power source,

such as the USB port on a computer or into a compatible 5V USB wall adapter (not included) and plug into a wall socket.

- The LCD display in the charging case will show power level while charging.

PAIR & CONNECT WITH A NEW DEVICE

- The earbuds will automatically power on and pair with each other when removed from the charging case. A voice prompt “**Power on, TWS connected**” will confirm successful pairing.
- You will hear a voice prompt saying “**Device pairing**” indicating the earbuds are in pairing mode.
- Open the Bluetooth settings on your smart device and search for available devices.
- Select “**Revue Earbuds**” from the list to connect.
- Once connected, you will hear a voice prompt saying “**Device connected**”.
- Previously connected earbuds will connect automatically after they are powered on.
- The earbuds will automatically reconnect to the last paired device when powered on.
- The earbuds can be used either individually or as a pair.
- The earbuds will automatically power off if not connected within 5 minutes.
- The earbuds will automatically power off when placed securely in the charging case.

MUSIC PLAYBACK & CALLS

Music Controls:

- Tap the **Multi-Function Touch Sensor** on either earbud once to play or pause music.
- Tap the left earbud twice to skip to the next track.
- Tap the right earbud twice to skip to the previous track.
- Tap the left earbud three times to increase the volume.
- Tap the right earbud three times to decrease the volume.

Call Controls:

- Tap the **Multi-Function Touch Sensor** on either earbud once to answer a call, and tap once again to end the call.
- Press and hold the **Multi-Function Touch Sensor** on either earbud for 2 seconds until you hear a prompt tone to reject an incoming call.

Voice Assistant:

- Press and hold the **Multi-Function Touch Sensor** on the left earbud for 2 seconds to activate your device's voice assistant (Siri for iOS or Google Assistant for Android).
- A beep will sound to indicate the voice assistant is activated.

RESET THE EARBUDS

- If you experience pairing issues, delete "**Revue Earbuds**" from your device's Bluetooth list and turn off Bluetooth.
- Then follow the instructions under "**PAIR & CONNECT WITH A NEW DEVICE**" to reconnect the earbuds.

TECH SPECIFICATIONS

Rated Power	3mW x2
Nominal Impedance	32 ohm
Driver Size	13mm
Frequency Response	50Hz ~ 5KHz
S/N Ratio	>86dB
Wireless Range	33 feet (10 meters)
Playback Time	Up to 3 hours (Max Volume)
Charging Case Battery Capacity	250mAh/3.7V (0.925Wh)
Earbuds Battery Capacity	40mAh/3.7V x2 (0.296Wh)
Charging Input	DC 5V/300mA
Charging Time	1 hour (earbuds) / 1 hour (charging case)

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2ADOZ-BT1024
Made in China