

**DIPLOMAT 10000MAH 20W PD POWER BANK WITH 15W WIRELESS  
CHARGER, WATCH CHARGER & STAND  
INSTRUCTION MANUAL  
EPB-DP26**

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.**


**IN THE BOX**

- EPB-DP26 Diplomat 10000mAh 20W PD Power Bank (x1)
- Charging Cable (x1)

**SAFETY PRECAUTIONS**

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to “test mode” in the presence of a strong magnetic force, if pace-maker or other electronical body implant is in use. Keep a minimum of 3 feet distance.

## PRODUCT DIAGRAMS

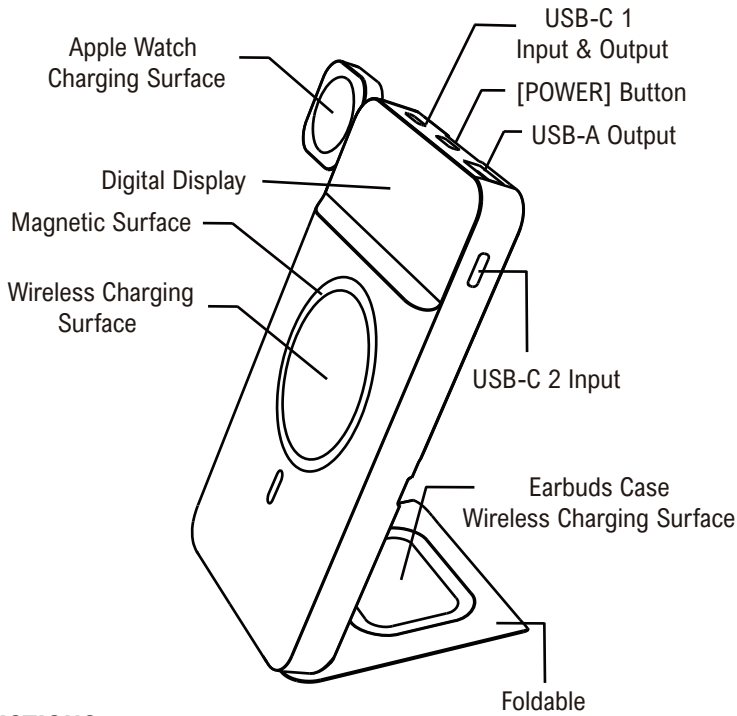

## INSTRUCTIONS

Charge the power bank fully before using for the first time.

### CHARGING THE POWER BANK

- Plug the small connector of the included charging cable into the USB-C port 1 or 2 on the power bank. Plug the other end of the cable into a USB-C power source, such as the USB-C port on a computer or into a certified USB-C adapter (not included), and plug into a wall socket.
- The digital display will display power level while the power bank is in charging.

**Note:** When the power bank is being charged with 18W or above power adapter, the fast-charging icon will appear in digital display.

### CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Plug your own cable into USB-A port or USB-C port and plug the other end of the cable to your device with the appropriate connector.
- Or use the included charging cable from the power bank, connect the USB-C tip of the charging cable to your device. Plug the other end of the cable into the USB-C 1 port of the power bank.
- The power bank will begin to charge automatically.
- The digital display will show available power level of battery when charging.
- Remove the cable from your mobile device when it is fully charged.

**Note:** When the charged device is being charged with 18W or above power, the fast-charging icon will appear in GREEN color on the digital display.

## **USING WIRELESS CHARGING FOR PHONE**

- Press the **[Power]** button once to turn on the power bank. The digital display will display power level with wireless charging symbol flashing BLUE color three times and stay in BLUE color. At the same time, the fast-charging icon will appear in GREEN color.
- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.
- Press the **[Power]** button twice to turn off the power bank.

## **WIRELESS CHARGING WITH MAGNETIC ATTACHMENT**

- If the charged device supports MagSafe Charger, simply place the device against the magnetic surface of the power bank, the device will begin to charge automatically.
- The perfectly aligned magnets in the wireless charging surface will attach to the charged device and provide more secure wireless charging.
- Remove your device from the wireless charging surface when it is fully charged.

## **USING WIRELESS CHARGING FOR EARBUDS CASE**

- Press the **[Power]** button once to turn on the power bank. The digital display will display power level with wireless charging symbol flashing BLUE color three times and stay in BLUE color. At the same time, the fast-charging icon will appear in GREEN color.
- Place a wireless charging enabled earbuds case on the Earbuds Case Wireless Charging Surface, the earbuds case will begin to charge automatically.
- If your earbuds case does not begin to charge, try repositioning it on the wireless charging surface. You may remove the case of your earbuds charging case to charge properly.
- Remove your earbuds case from the wireless charging surface when it is fully charged.
- Press the **[Power]** button twice to turn off the power bank.

## **USING WIRELESS CHARGING FOR APPLE WATCH**

- Press the **[Power]** button once to turn on the power bank. The digital display will display power level with wireless charging symbol flashing BLUE color three times and stay in BLUE color. At the same time, the fast-charging icon will appear in GREEN color.
- Place a wireless charging enabled Apple watch on the Smart Watch Charging Surface, the Apple watch will begin to charge automatically.
- The perfectly aligned magnets in the wireless charging surface will attach to the charged Apple watch and provide more secure wireless charging.

- If your Apple watch does not begin to charge, try repositioning it on the smart watch wireless charging surface. You may remove the case of your watch to charge properly.
- Remove your Apple watch from the wireless charging surface when it is fully charged.

#### **NOTE ON SAFETY FEATURES:**

The wireless charging symbol will automatically flash BLUE when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface.

#### **TECH SPECIFICATIONS**

- Battery Capacity: 10000mAh/3.85V/38.5Wh
- USB-C 1 Port Input: DC 5V/3A, 9V/2A, 12V/1.5A (18W Max.)
- USB-C 1 Port Output: DC 5V/3A, 9V/2.22A, 12V/1.67A (20W Max.)
- USB-C 2 Port Input: DC 5V/2A, 9V/2A, 12V/1.5A (18W Max.)
- USB-A Port Output: DC 5V/4.5A, 9V/2.2A, 12V/1.67A (22.5W Max.)
- Wireless Charging Output (for Phone): 5W/7.5W/10W/15W
- Wireless Charging Output (for Earbuds): 5W
- Wireless Charging Output (for Watch): 2W
- Working Temperature: 14°F ~ 113°F (-10°C ~ 45°C)

#### **FCC INFORMATION**

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A9Q9-EPB-DP26

Made in China