

Magma Combo Hand Warmer and Power Bank
Instruction Manual
EPB-MC18

**READ ALL INSTRUCTIONS CAREFULLY BEFORE
USE AND KEEP THIS MANUAL**


In the Box

- Magma Combo Hand Warmer and Power Bank(x1)
- Power Cable (x1)
- User Manual (x1)

Safety Precautions

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- This device is NOT a substitute for proper medical equipment or attention.
- ONLY use the supplied power cable.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do no use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacture or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Product

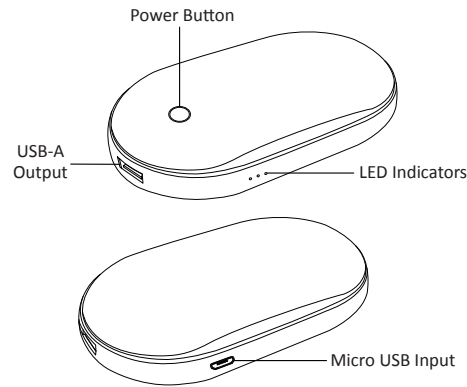

Instructions

Charge the power bank fully before usage.

Charging the Power Bank

- Plug the small connector of the included charging cable into the micro-USB charging port on the power bank.
- Plug the large connector into an USB power source, such as the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into a wall socket.
- The LED indicator will flash in **BLUE** while power bank is in charging and stay solid when the power bank is fully charged.

Charging Mobile Phones & Other Electronic Devices

- Using the cable of the device you wish to charge, connect the charging cable to your mobile phone/device with the appropriate connector and the USB-A end to the USB-A output of the power bank.

- The LED indicator will glow **BLUE** when charging.
- Remove the cable from your mobile phone/device when it is fully charged.

Hand Warmer Instruction

- Press and hold the Power button to turn on the hand warmer function. The LED Indicator will flash in **RED** indicating the power bank is in hand warmer mode.
- Press the Power button to adjust temperature of hand warmer, indicated by LED indicators:
 - 3 Red Led Lights - 140° F
 - 2 Red Led Lights - 122° F
 - 1 Red Led Light - 104° F
- Wait 30 seconds for hand warmer to heat up.
- Hand warmer will stay warm for about 3 hours when fully charged.
- Press and hold the Power button to turn off the hand warmer function. The LED indicator will turn **OFF**.

LED Indicators

- Press the Power button once to view the remaining power capacity.
- Press the Power button twice to turn off LED.

Tech Specifications

- Battery: 4000mAh/3.7V 14.8Wh
- Micro USB Input: DC 5V/2A
- USB-C Input: DC 5V/2A
- USB-A Output: DC 5V/2A

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.