

**PRESTIGE 5000MAH 20W PD POWER BANK WITH 15W MAGNETIC
WIRELESS CHARGER, CARD HOLDER & FIND MY TRACKING
INSTRUCTION MANUAL
EPB-PR26**

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


IN THE BOX

- Prestige 5000mAh 20W PD Power Bank (x1)
- Charging Cable (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to “test mode” in the presence of a strong magnetic force, if pace-maker or other electrical body implant is in use. Keep a minimum of 3 feet distance.

PRODUCT DIAGRAMS

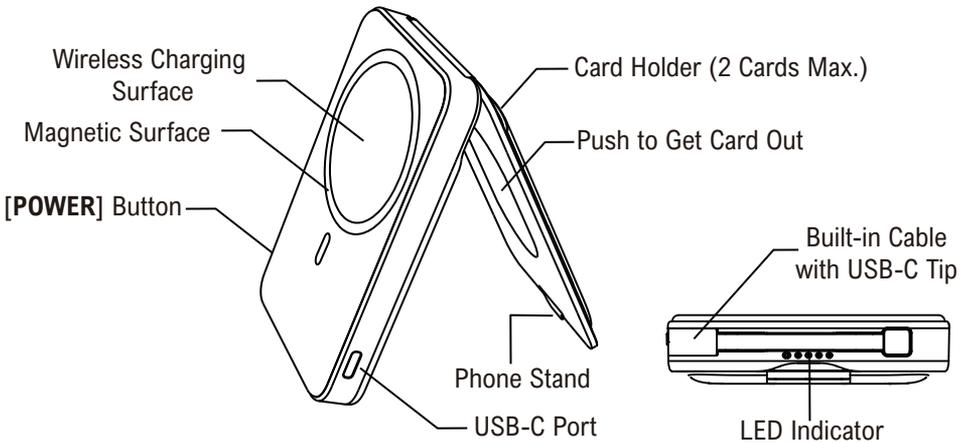

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Plug the small connector of the included charging cable into the USB-C port on the power bank. Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- Or pull the built-in USB-C cable out and insert the USB-C tip into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator will flash WHITE while the power bank is in charging and stop flashing when the power bank is fully charged.

CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector.
- Connect the other end of the cable to the USB-C port of the power bank.
- Or pull the built-in USB-C cable out and insert the USB-C tip into your device with USB-C female port.
- The power bank will begin to charge automatically.
- The LED indicator will illuminate WHITE when charging.
- Remove the cable from your mobile device when it is fully charged.

USING WIRELESS CHARGING

- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically. The first LED indicator on the left will illuminate GREEN to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.

Note:

- If the first LED indicator on the left is flashing GREEN when the wireless charger is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.

WIRELESS CHARGING WITH MAGNETIC ATTACHMENT

- If the charged device supports MagSafe Charger, simply place the device against the magnetic surface of the power bank, the device will begin to charge automatically. The perfectly aligned magnets in the wireless charging surface will attach to the charged device and provide more secure wireless charging.
- The first LED indicator on the left will illuminate GREEN to indicate that your device is charging properly.
- Remove your device from the wireless charging surface when it is fully charged.

NOTE ON SAFETY FEATURES:

The wireless charging will automatically power OFF when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface. The first LED indicator on the left will flash GREEN to warn of automatic shutoff.

USING THE ITEM LOCATOR FUNCTION:

- Turn on Bluetooth of your iPhone or iPad and make sure the iPhone or iPad is connected to internet.
- Hold the power bank near you iPhone or iPad.
- Press and hold the **[POWER]** button of the power bank for 2 seconds to power on.
- You will hear a single beep indicating the tracker is in pairing mode.
- Open the **Find My** app on your iPhone or iPad.



- In the **Find My** app:
 - a) Navigate to “Items” tab and tap “+” button to add a new item.
 - b) Select “Add Other Item” to start searching items.
 - c) When you see “R5016” popping out, tap “Continue”.
 - d) Then you can follow the onscreen steps to finish setting up the tracker.
- Press and hold the **[POWER]** button on the bottom of the tracker for 6 seconds to power off. You will hear a single beep, followed by two consecutive beeps and then three consecutive beeps, indicating the tracker is turned off.

LOCATING THE TRACKER:

- Open the **Find My** app and navigate to the “Items” tab.
- Tap on your item from the list.
- If the tracker is nearby, tap “Play Sound” to make the tracker on the power bank beep and follow the sound to find the power bank.
- You can also use voice assistant to start the search.
- If the power bank is not nearby, the last known location will appear on the map. Tap “Directions” to navigate to the last known location.

NOTIFICATION:

- Open the **Find My** app and navigate to the “Items” tab.
- Tap on your item from the list.
- Scroll down to find “Notifications”.
- Turn on or turn off “Notify When Left Behind”.

RESETTING THE TRACKER:

- To remove the tracker on the power bank from your iPhone or iPad, open the **Find My** app and navigate to the “Items” tab. Locate the tracker, and scroll down to select “Remove”.
- Then you can follow the onscreen steps to finish removing the tracker.
- If you have trouble connecting or pairing the tracker, press and hold **[POWER]** button of the power bank for 11 seconds. You will hear a single beep, followed by two consecutive beeps, three consecutive beeps and a long beep, indicating the tracker is reset successfully.
- Tap on your item from the list.
- Follow the instructions under “**PAIR & CONNECT WITH A NEW DEVICE**” to pair with the tracker again.

TECH SPECIFICATIONS

- Battery Capacity: 5000mAh/3.85V/19.25Wh
- USB-C Port & Cable Input: DC 5V/3A, 9V/2A, 12V/1.5A (18W Max.)
- USB-C Port & Cable Output: DC 5V/3A, 9V/2.22A, 12V/1.67A (20W Max.)
- Wireless Charging Output: 5W/7.5W/10W/15W
- Working Temperature: 14°F ~ 113°F (-10°C ~ 45°C)

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.