

# **AMP 5W WIRELESS SPEAKER**

## **INSTRUCTION MANUAL**

### **ESP-AM26**

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.**


#### **WHAT'S INCLUDED:**

- ESP-AM26 AMP 5W Wireless Speaker (x1)
- USB-C Charging Cable (x1)

#### **SAFETY PRECAUTIONS**

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual.
- Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

## PRODUCT DIAGRAMS

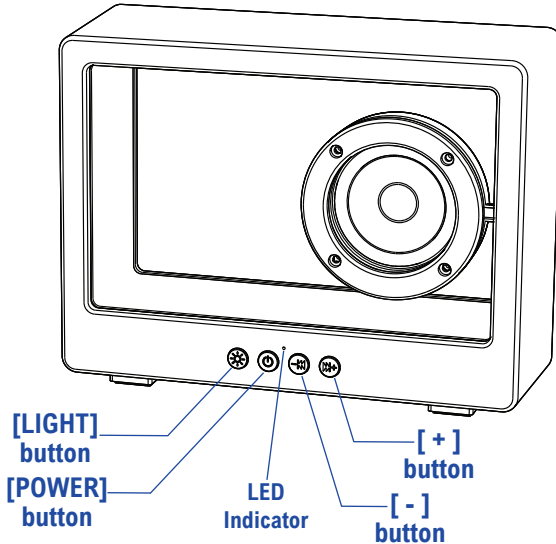

## INSTRUCTIONS

Be sure to fully charge the speaker before using for the first time.

### CHARGE THE SPEAKER

- Plug the small connector of the included charging cable into the USB-C charging port on the back of speaker.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED light will **glow RED** when charging and turn off when fully charged.
- On lower power, you will hear a voice prompt saying **“Battery low.”** indicating that the speaker needs to be recharged.

### PAIR & CONNECT WITH A NEW DEVICE

- Press and hold the **[Power]** button for 3 seconds to turn on the speaker. You will hear a voice prompt saying **“Power on, Bluetooth mode, pairing.”**

indicating the speaker is in pairing mode.

- Open the Bluetooth menu on your smart device and search for new devices.
- When you see “**AMP Speaker**” listed, tap it to connect. You will hear a voice prompt saying “**Connected.**” when paired successfully.
- Previously paired speaker will pair automatically after they are powered on.
- Press and hold the **[Power] button** for 3 seconds again to turn off the speaker.

***Note:** The speaker will automatically shut off after 5 minutes when it is disconnected.*

## **PLAYING MUSIC**

- Press the **[Play] button** to play/pause your audio.
- Press the **[ + ] button** to skip to next track.
- Press and hold the **[ + ] button** to increase volume.
- Press the **[ - ] button** to skip to previous track.
- Press and hold the **[ - ] button** to decrease volume.
- ***Note:** There is no built-in microphone in the speaker. You need to use your smartphone to answer phone call.*

## **USING THE RGB LED LIGHT**

- Press and hold the **[Power] button** for 3 seconds to turn on the speaker.
- The LED light will turn on automatically.
- Press the **[Light] button** to switch light modes and color.
- Press and hold the **[Light] button** for 3 seconds to turn off the LED light, and press the **[Light] button** again to turn on the light.

## **FM MODE**

- In Bluetooth mode, 2x rapid press on the **[Power] button** to enter FM mode. You will hear a voice prompt saying “**FM radio mode**”.
- Press the **[Power] button** to start search radio channel. The searching

process will take 2~5 minutes.

- When the channel searching is complete, press the **[ + ] button** and **[ - ] button** to switch radio channel.
- Press and hold the **[ + ] button** and **[ - ] button** to increase or decrease volume.
- 2x rapid press on the **[Power] button** to resume Bluetooth mode.
- Press and hold the **[Power] button** to turn off.

## RESET THE SPEAKER

- If you have trouble pairing your speaker, forget the pairing name “**AMP Speaker**” from the list of the connected device and turn off the Bluetooth.
- Follow the instructions under “**PAIR & CONNECT WITH A NEW DEVICE**” to pair with the speaker again.

## TECH SPECIFICATIONS

Speaker Output	5W
Impedance	4 ohm
Frequency Response	20Hz ~ 20KHz
S/N Ratio	>80dB
Connection Range	33 feet (10 meters)
Continuous Play Time	Up to 6 hours (Max Volume)
Battery Capacity	1200mAh/3.7V 4.44Wh
Charging Input	DC 5V/1A
Charging Time	2 hours
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

## FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2BNTC-BRS50

Made in China