Ensemble Clip-On Wireless Speaker Instruction Manual ESP-EC21

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.


In the Box

- ESP-EC21 Ensemble Clip-On Wireless Speaker (x1)
- Charging Cable (x1)
- Instruction Manual (x1)

Safety Precautions

- This product is NOT a toy, keep away from children and pets.
- \bullet Only use the device according to the instructions in this manual.
- · Never use the device for anything other than its intended purpose.
- ONLY use the supplied power cable.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or power cable is damaged. If device or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- · Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Product

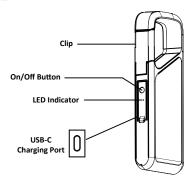

Instructions

Be sure to fully charge the speaker before using for the first time.

Charge the Speaker

- Lift the protective rubber seal of the charging port, and plug the small connector of the included charging cable into the USB Type-C charging port on the speaker.
- Plug the large connector into a USB power source, such as the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into a wall socket
- The LED indicator will glow RED when charging and turn off when fully charged.

Pair & Connect with a New Device

- Press and hold the On/Off button to turn on the speaker. LED indicator will flash RED & BLUE indicating the speaker is in pairing mode.
- Open the Bluetooth menu on your smart devices and search for new devices.

- When you see "Ensemble Clip On Speaker" listed, tap it to connect. LED indicator will slowly flash in BLUE when paired successfully.
- Previously paired speaker will pair automatically.
- The speaker will automatically shut off after 3 minutes when it is disconnected.
- Press and hold the On/Off button to turn off the speaker.

Play & Calling

- When playing music, press the On/Off button to pause/resume music.
- When there is an incoming call, press the On/Off button once to answer the call, and again to end the call. Press and hold the On/Off button to reject the call.

Using the Speaker in Wet Conditions

The speaker has an Ingress Protection rating of **IPX4**. This means it is protected against water splashes from all directions. It is **NOT protected** from submersion in water, such as flooding.

Always make sure that the protective rubber seal is completely covering the charging port before using the speaker in wet conditions. **Never charge the speaker in wet conditions.**

Tech Specifications

rech specifications		
	Speaker Output	2W
	Impedance	4 ohm
	Frequency Response	150Hz~18KHz
	S/N Ratio	> 80dB
	Connection Range	33 feet
	Continuous Play Time	Up to 2 hours (with max volume)
	Battery Capacity	300mAh
	Charging Time	1.5 hours (from 0-100%)

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



