

# **GIG WIRELESS SPEAKER WITH NIGHTLIGHT & WHITE NOISE**

## **INSTRUCTION MANUAL**

### **ESP-GG26**

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.**


#### **WHAT'S INCLUDED:**

- ESP-GG26 Gig Wireless Speaker with Nightlight & White Noise (x1)
- USB-C Charging Cable (x1)

#### **SAFETY PRECAUTIONS**

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual.
- Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

## PRODUCT DIAGRAMS

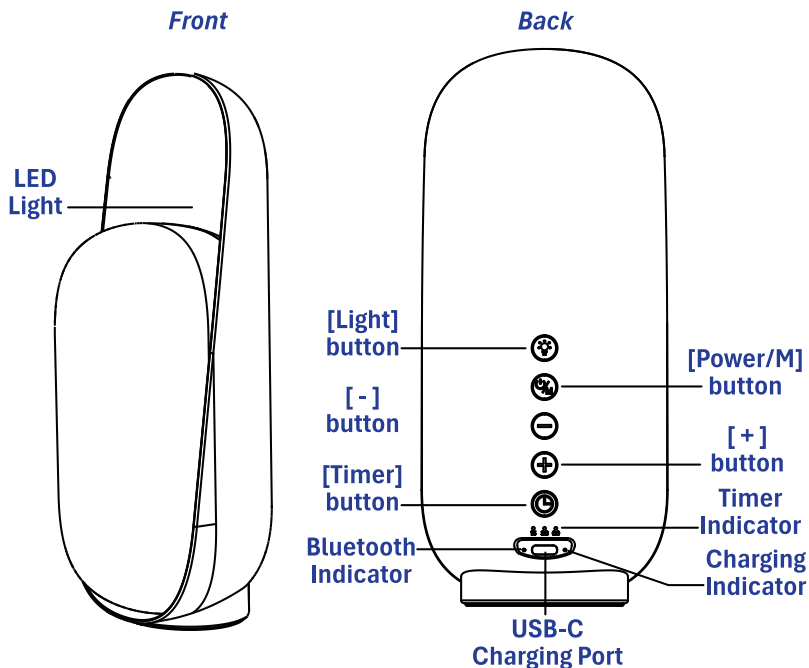

## INSTRUCTIONS

Be sure to fully charge the speaker before using for the first time.

### CHARGE THE DEVICE

- Insert the smaller end of the included charging cable into the USB-C port on the speaker.
- Connect the other end of the included charging cable to a USB power source, such as the USB port on a computer or into a compatible 5V USB wall adapter (not included) and plug into a wall socket.
- The charging LED indicator on the right of the USB-C port will **glow RED** while charging and **turn off** when fully charged.
- When the battery is low, you will hear a voice prompt: **“Battery low.”** indicating that the device needs to be recharged.

## PAIR & CONNECT WITH A NEW DEVICE

- Press and hold the **[Power/M] button** to turn on the speaker. The speaker will automatically enter White Noise Mode.
- Quickly press the **[Power/M] button** twice to switch to Bluetooth mode. You will hear **“Power on, pairing.”** indicating the speaker is ready to pair.
- Open the Bluetooth settings on your smart device and search for available devices.
- Select **“Gig Speaker”** from the list to connect.
- Once connected, you will hear a voice prompt saying **“Connected”**.
- The speaker will automatically reconnect to previously paired devices when powered on and switched to Bluetooth mode.
- Press and hold the **[Power] button** again for 3 seconds to turn off the speaker. You will hear **“Power off”**.

***Note:** The speaker will automatically shut off after 5 minutes when it is disconnected.*

## MUSIC PLAYBACK & CALLS

### Music Controls:

- Press the **[Power/M] button** to **play/pause music**.
- Press the **⊕ button** to skip to the next track;
- Press the **⊖ button** to return to the previous track;
- Press and hold the **⊕ button** to increase volume.
- Press and hold the **⊖ button** to decrease volume.

### Call Controls:

- You will hear **“Incoming call”** when there is an incoming call.
- Press the **[Power/M] button** to answer a call, and press it again to end the call.
- Press and hold the **[Power/M] button** for 2 seconds to reject an incoming call.

***Note:** The speaker DOES NOT have a built-in microphone. Please use your smartphone to speak during calls.*

## RESET THE SPEAKER

- If you experience pairing issues, delete “**Gig Speaker**” from your device’s Bluetooth list and turn off Bluetooth.
- Then follow the instructions under “**PAIR & CONNECT WITH A NEW DEVICE**” to reconnect the speaker.

## WHITE NOISE MODE

- Press and hold the **[Power/M] button** to turn on the speaker. The speaker will automatically enter White Noise Mode.
- In the Bluetooth mode, quickly press the **[Power/M] button** twice to switch to White Noise Mode.
- Press the **[Power/M] button** to play/pause the sound.
- Press the **⊕ button** or the **⊖ button** to cycle through the available white noise sounds (**6 options**).
- Press and hold the **⊕ button** to increase volume.
- Press and hold the **⊖ button** to decrease volume.

## SLEEP TIMER

- Press the **[Timer] button** to activate the sleep timer.
- The timer indicator in the back will show the selected timer setting: 15 minutes, 30 minutes or 60 minutes.
- The speaker will automatically power off when the timer ends.
- Quickly press the **[Power/M] button** twice to exit White Noise Mode.
- Press and hold the **[Power/M] button** for 3 seconds to turn off the speaker.

## USING LED LIGHT

- Press and hold the **⊕ button** to turn on the LED light.
- Press the **⊕ button** to cycle through brightness levels (High / Medium / Low).
- Press and hold the **[Power/M] button** again to turn off the LED light.

## TECH SPECIFICATIONS

Speaker Output	3W
Frequency Response	20Hz ~ 20KHz
S/N Ratio	>80dB
Wireless Range	33 feet (10 meters)
Playback Time	Up to 6 hours (at max volume)
Battery Capacity	1200mAh/3.7V (4.44Wh)
Charging Input	DC 5V/800mA
Charging Time	Approx. 1.5 hours
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

## FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2BNUQ-SM07

Made in China