

SILO IPX5 WATERPROOF 20W DUAL WIRELESS SPEAKER SET

INSTRUCTION MANUAL

ESP-SL25

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


WHAT'S INCLUDED:

- ESP-SL25 Silo IPX5 Waterproof 20W Dual Wireless Speaker Set (x1)
- USB-C Charging Cable (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual.
- Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.
- Strong Magnetic Fields. Neodymium magnets can damage or interfere with electronic devices and magnetic storage media, including:
 - Computers, monitors, and hard drives.
 - Credit cards and bank cards.
 - Speakers and mechanical watches.
 - Hearing aids and other sensitive electronics.
- Magnets may cause pacemakers or other implanted medical devices to malfunction or enter "test mode." Individuals with these implants should maintain a minimum distance of 3 feet (1 meter) from the magnets at all times.

PRODUCT DIAGRAMS

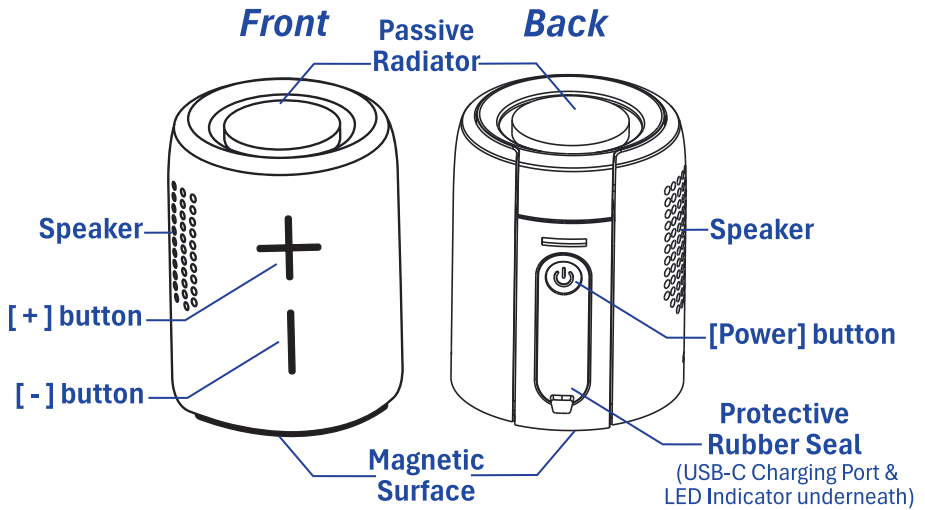

TECH SPECIFICATIONS

Speaker Output	10W (x2)
Impedance	4 ohm
Frequency Response	20Hz ~ 20KHz
S/N Ratio	>80dB
Connection Range	33 feet
Continuous Play Time	Up to 2 hours (at max volume)
Battery Capacity	1800mAh/3.7V 6.66Wh (x2)
Charging Input	DC 5V/1A
Charging Time	2 hours
Waterproof Grade	IPX5
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

INSTRUCTIONS

Be sure to fully charge the speaker before using for the first time.

CHARGE THE SPEAKER

- Lift the protective rubber seal of the charging port on speaker.
- Plug the small connector of the included charging cable into the USB-C charging port on speaker.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED light will **glow red** while charging and turn OFF when fully charged.
- On lower power, you will hear a voice prompt saying “**Battery low.**” indicating that the speaker needs to be recharged.

PAIR & CONNECT WITH A NEW DEVICE

- Long press the **[Power] button** on the two speakers for 3 seconds to turn on the speakers. You will hear a voice prompt saying “**Power on, device pairing.**” indicating the speaker is in pairing mode.
- The speakers will automatically pair with each other when powered on. A voice prompt “**TWS connected**” will confirm successful pairing.
- Open the Bluetooth menu on your smart device and search for available devices.
- Select “**Silo Speaker**” from the list to connect.
- Once connected, you will hear a voice prompt saying “**Device connected**”.
- The speakers will automatically reconnect to previously paired devices when powered on and switched to Bluetooth mode.
- Long press the **[Power] button** on either speaker again for 3 seconds to turn off both speakers. You will hear “**Power off**”.

***Note:** The speaker will automatically shut off after 5 minutes when it is disconnected.*

MUSIC PLAYBACK & CALLS

Music Controls:

- Press the **[Power] button** to **play/pause music**.
- Long press the **[+] button** for 3 seconds to skip to the next track;
- Long press the **[-] button** for 3 seconds to return to the previous track;
- Press the **[+] button** to increase volume.
- Press the **[-] button** to decrease volume.

Call Controls:

***Note:** The speaker **DOES NOT** have a built-in microphone. Please use your smart device to answer or speak during calls.*

USING THE SPEAKER IN WET CONDITIONS

- This speaker is IPX5-rated, meaning it is protected against low-pressure water jets from any angle. It is not waterproof and should not be submerged in water.
- Always secure the protective rubber seal over the charging port before use.
- Ensure the device is completely dry before charging.

RESET THE SPEAKER

- If you experience pairing issues, delete “**Silo Speaker**” from your device’s Bluetooth list and turn off Bluetooth.
- Then follow the instructions under “**PAIR & CONNECT WITH A NEW DEVICE**” to reconnect the speaker.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.