

EASY BREEZE RECHARGEABLE HAND FAN

INSTRUCTION MANUAL

WTV-EB25

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.


IN THE BOX

- WTV-EB25 Easy Breeze Rechargeable Hand Fan (x1)
- Charging Cable (x1)
- Lanyard (x1)

SAFETY PRECAUTIONS

- This device is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

PRODUCT DIAGRAMS

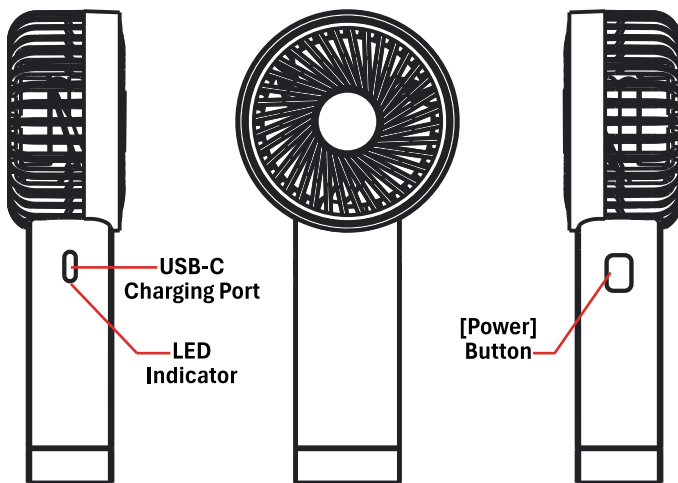

INSTRUCTIONS

Be sure to fully charge the fan before using for the first time.

CHARGE THE FAN

- Plug the small connector of the included charging cable into the USB-C charging port on the fan.
- Plug the large connector into a USB power source, such as the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into a wall socket.
- The LED indicator on the back will **flash red** while charging and **turn solid red** when fully charged.

NOTE: *DO NOT use the fan during recharging.*

USING THE FAN

- Press the **[Power]** button to turn the fan ON.
- Press the **[Power]** button to adjust fan speed level between low, medium and high.
- Press the **[Power]** button again to turn the fan OFF.
- Turn the fan OFF when it's not in use.

TECH SPECIFICATIONS

Battery Capacity	500mAh/3.7V
Charging Input	DC 5V/500mA
Continuous Using Time	Up to 2 hours (High Speed) Up to 2.5 hours (Medium Speed) Up to 3.5 hours (Low Speed)
Charging Time	2 hours

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference,

and (2) this device must accept any interference received, including interference that may cause undesired operation.

