

# **FROSTY HANDHELD FAN WITH ICE COOLING PLATE**

## **INSTRUCTION MANUAL**

### **WTV-FR26**

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.**


#### **IN THE BOX**

- WTV-FR26 Frosty Handheld Fan with Ice Cooling Plate (x1)
- Charging Cable (x1)

#### **SAFETY PRECAUTIONS**

- This device is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

## PRODUCT DIAGRAMS

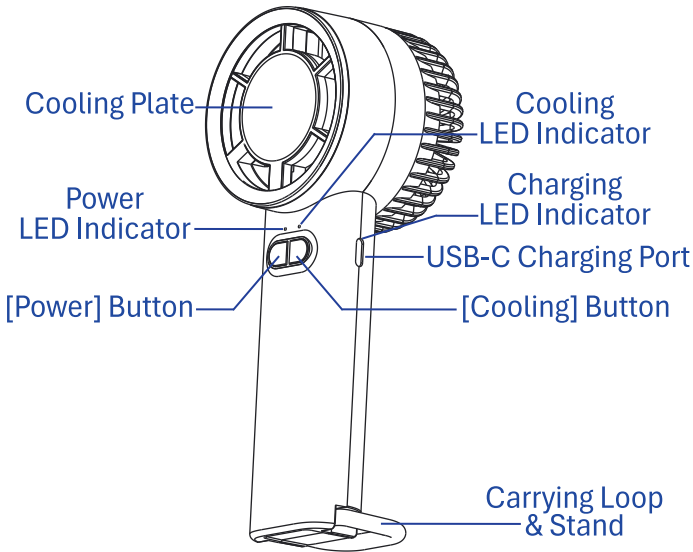

## INSTRUCTIONS

Be sure to fully charge the fan before using for the first time.

### CHARGE THE FAN

- Plug the small connector of the included charging cable into the USB-C charging port on the fan.
- Plug the large connector into a USB power source, such as the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into a wall socket.
- The charging LED indicator will **glow red** while charging and **turn OFF** once the battery is fully charged.

**NOTE:** DO NOT use the fan during recharging.

### USING THE FAN

- Press the **[Power] button** to turn the fan ON. The power LED indicator will **glow blue**.
- Press the **[Power] button** repeatedly to cycle through the 3 speed level

between low, medium and high.

- At high speed level, press the **[Power] button** again to turn the fan OFF. The power LED indicator will turn OFF.
- Turn the fan OFF when it's not in use.

## ICE COOLING MODE

- The fan features an integrated cooling plate designed to reach freezing temperatures in as little as 10 seconds. This technology chills the airflow and provides a refreshing and ice-cold sensation upon contact with the skin.
- **To Activate:** While the fan is running, press the [Cooling] button, the cooling LED indicator will **glow blue**.
- **To Deactivate:** Press the [Cooling] button again to return to regular wind mode.
- **Pro-Tip for Maximum Cooling:** For the fastest relief, gently press the cooling plate against your wrists, neck or face. Applying the plate to these pulse points (where blood circulation is closest to the surface) helps lower your overall body temperature more effectively.

## TECH SPECIFICATIONS

Battery Capacity	2000mAh/3.7V
Charging Input	DC 5V/1A
Continuous Using Time	Up to 6 hours (Low Speed) Up to 45 hours (Medium Speed) Up to 3 hours (High Speed) Up to 1.5 hours (Ice Cooling Mode)
Charging Time	3 hours

## FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

**Caution:** Any changes or modifications not expressly approved could void the

user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Made in China